



no buildings | no roads | no power lines  
just great reliability.

#### World Headquarters

39 Grand Canyon Lane  
San Ramon,  
CA 94583 USA

#### President

Frank Martens

#### Phone

925.901.0103

#### Fax

925.901.0403

#### Peninsula Engineering

Solutions, inc. may  
change specifications as  
necessary to meet  
industry requirements.

Website [www.peninsulaengineering.com](http://www.peninsulaengineering.com)

Email [fmartens@peninsulaengineering.com](mailto:fmartens@peninsulaengineering.com)

# RF-2500E Repeater

Microwave Repeater Systems

## Applications

- Low-cost, highly reliable 2.5 GHz microwave through repeater for extending range of or clearing obstructed microwave radio paths.
- Excellent performance with analog, digital, or video microwave radios; channel capacity to 1200 FDM, 1 DS3, 45 Mb/s PCM, 34 Mb/s PCM.
- Compatible with any manufacturer's 2.5 GHz radio terminal.
- Solar power compatible -- economical in thin routes and remote locations.

## Features

- RF output power up to +23 dBm analog, +16 dBm digital.
- Power consumption only 2.2 amperes at 12 Vdc for duplex operation.
- Solar powered, ac powered, or powered by primary cells.
- Compact and lightweight -- ideally suited for remote sites that do not have access roads or commercial power.
- Environmentally protected aluminum, weathertight, lockable cabinet. No extra environmental shelter required in most installation. Suitable for use at unimproved sites anywhere in the world -- Alaska to Saudi Arabia.
- Internally protected duplex, frequency diversity, and three-way or "Y junction" configurations available.
- Only one active element per channel, the internally redundant linear amplifier.
- AGC/ALC provided to correct input fades and reduce overload.
- Maximum gain can be field-adjusted for easy fine-tuning.
- In the case of single duplex configuration, amplifiers can be replaced without disrupting service.
- RMAS-100 Alarm system (optional) can remotely monitor repeater.
- Equipped with directional couplers for in-service RF output power measurements.
- No frequency conversion -- received signal is filtered, amplified, and re-radiated.
- Very reliable, greater than 85,000 hours MTBF for duplex.
- Available as a self-contained RF repeater for use with customer-furnished antenna and power equipment or as a complete package including repeater, antenna, solar electric panels, battery charger and batteries.

## Table of Contents

APPLICATIONS	01
FEATURES	01
TECHNICAL SUMMARY	02
1. GENERAL	05
2. FUNCTIONAL DESCRIPTION	05
Basic Repeater	05
Amplifiers	10
Directional Couplers	10
AGC/ALC and	10
Max.Gain Adjustment	10
Power Supply	10
3. ALARMS	10
4. LICENSING	14
5. ORDERING	14
6. INSTALLATION	16
General	16
Power Wiring	16
DC Power	16
7. TESTS	16
General	16
Test Equipment	16
Application of Power	19
Antenna Isolation Measurement	20
Antenna Orientation, AGC/ALC set	
and Output Measurement	20
RX/TX Pad Installation	20
8. MAINTENANCE	20
Routine Maintenance	20
Administration Requirements	22
Trouble Location	22
Amplifier Replacement, Out of Service	22
Amplifier Replacement, In Service	22
APPENDIX A	24
Antenna System	24

## 1. GENERAL

- This Section provides information for the Peninsula Engineering RF-2500E, RF Repeater Assembly; hereinafter referred to as the RF-2500E. The RF-2500E may be used with any manufacturer's 2.5-GHz radio operating in the 2.3-2.7 GHz frequency range to provide an intermediate repeater.
- The RF-2500E assembly is an RF through repeater designed for remote locations. No tuning is required, and the use of highly reliable components and minimum active circuitry eliminates most subsequent maintenance. The repeater assembly consists of an equipment mounting panel, contained in a aluminum, weatherproof cabinet. If desired, the equipment mounting panel only may be mounted in a standard 19-inch (483-mm) rack, or the complete assembly may be wall-mounted. In most applications however, the complete assembly is pole- or tower-mounted. Front views of the repeater are shown in Figures 1.1 and 1.2.
- In addition to the RF-2500E repeater assembly, Peninsula Engineering Group offers accessory equipment consisting of antennas and mounting hardware, coaxial cable, batteries and hardware, and an ac power supply with an integral standby battery. The recommended antennas are parabolic grid, solid or high performance types chosen per application.

## 2. FUNCTIONAL DESCRIPTION

### Basic Repeater

- The RF-2500E duplex repeater uses internally redundant amplifiers for transmission in each of two directions. Each amplifier is powered by two separate battery supplies for added reliability. Bandpass filters and circulators, which form a duplexer network, direct the received signals to the amplifiers and combine the amplifier outputs with the received signals to a common antenna port for transmission in each direction (see Figure 2.1, 2.2 and 2.3).
- The received signal from "A" antenna, identified as frequency "f1," connected through N(male) to N(male) jumper supplied, enters the repeater panel via the panel mounted type N (f) connector and is then fed to a branching

circulator. From the circulator, the f1 signal is passed to an isolator and then to the f1 receive bandpass filter. The bandpass filter passes the f1 signal to a second isolator and (optional) f1 receive pad and then to amplifier A1. The amplified f1 signal passes to the (optional) f1 transmit pad. From the transmit pad, the f1 signal then passes the isolator and the f1 transmit bandpass filter to the branching circulator and then to the panel mounted type N(female) connector for connection to "B" antenna through the second N(male) to N(male) jumper.


- In the other direction, the received signal from "B" antenna, identified as frequency "f2," enters the repeater panel via the coax jumper to the panel mounted type N(female) connector and is then fed to a branching circulator. From the circulator, the f2 signal is passed to an isolator and then to the f2 receive bandpass filter. The bandpass filter passes the f2 signal to a second isolator and (optional) f2 receive pad and then to amplifier A2. The amplified f2 signal passes to the (optional) f2 transmit pad. From the transmit pad the f2 signal then passes through an isolator and the f2 transmit bandpass filter to the branching circulator and then to the panel mounted type N(female) connector for connection to "A" antenna through the coax jumper supplied.

**Table 2.1**  
**RF-2500E Nominal Power Level**

Modulation	Nominal Input dBm	Nominal Output dBm
FM/FSK/MSK	-22	+23
4PSK/QPSK/OQPSK	-24	+21
8PSK	-26	+19
16 QAM	-28	+17
QPR3/9QPRS	-27	+18
QPR5/25QPRS	-27.5	+17.5
QPR7/49QPRS	-28	+17
QPR9	-29	+16

- Receive pads RX f1 and RX f2 reduce the repeater receive signals to approximate the recommended input level. The transmit pads designated TX f1 and TX f2 reduce the output signal levels of the repeater to prevent overloading of the


FIGURE 1.1  
MECHANICAL LAYOUT, DUPLEX

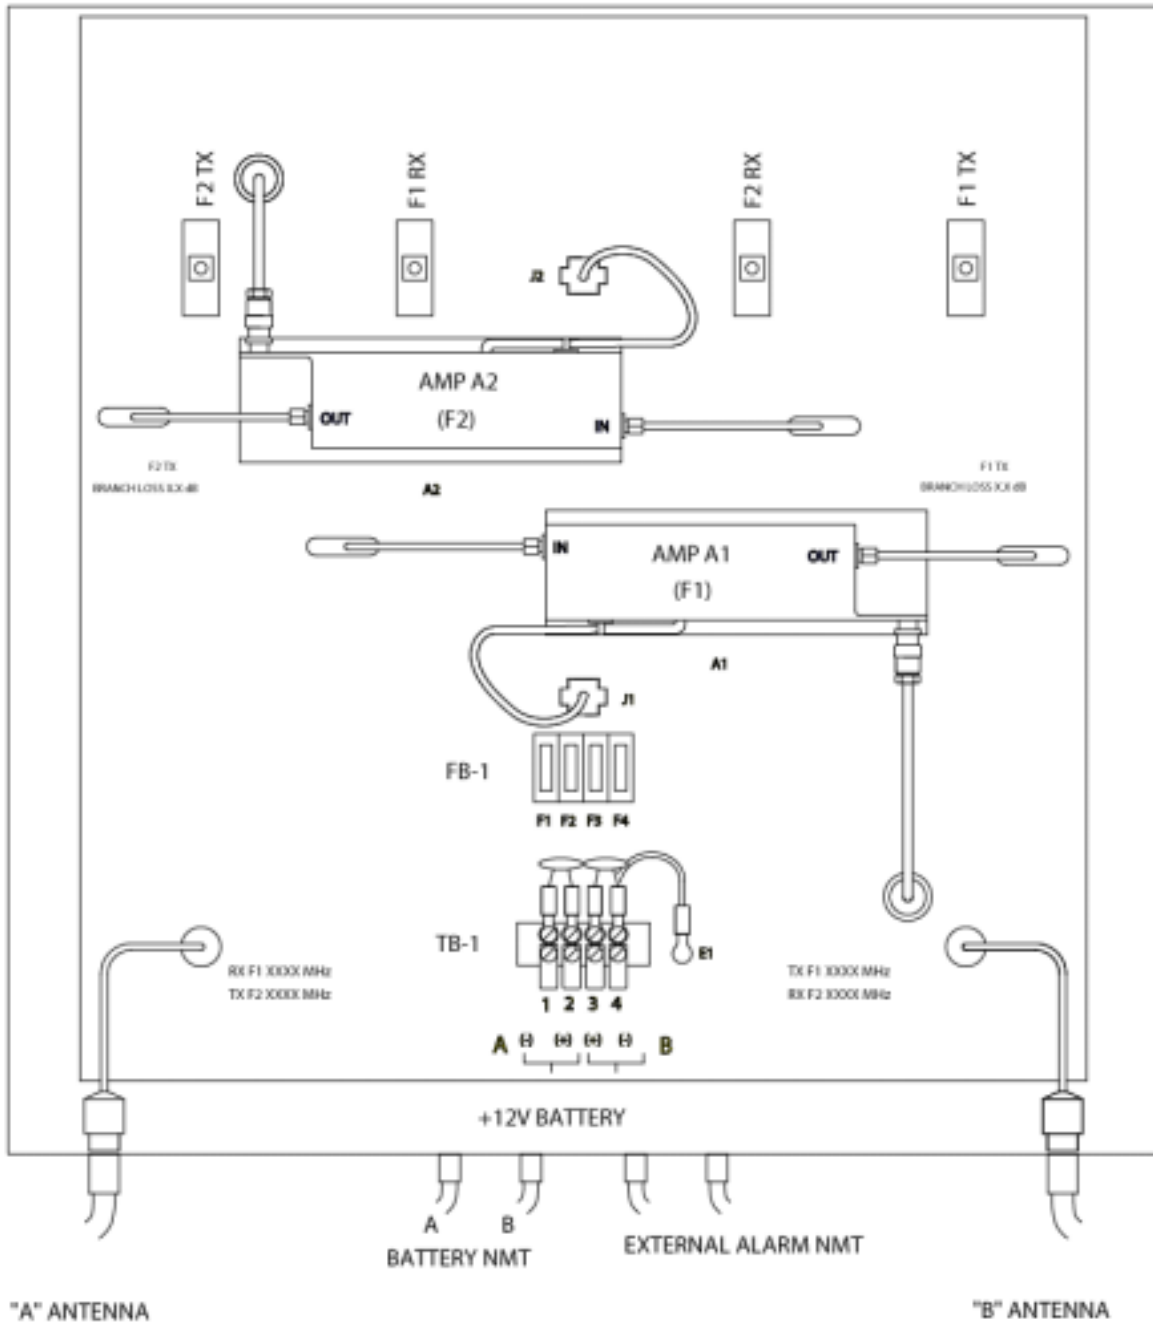

RF-2500E-01

FIGURE 1.2


MECHANICAL LAYOUT, DUPLEX  
FREQUENCY DIVERSITY

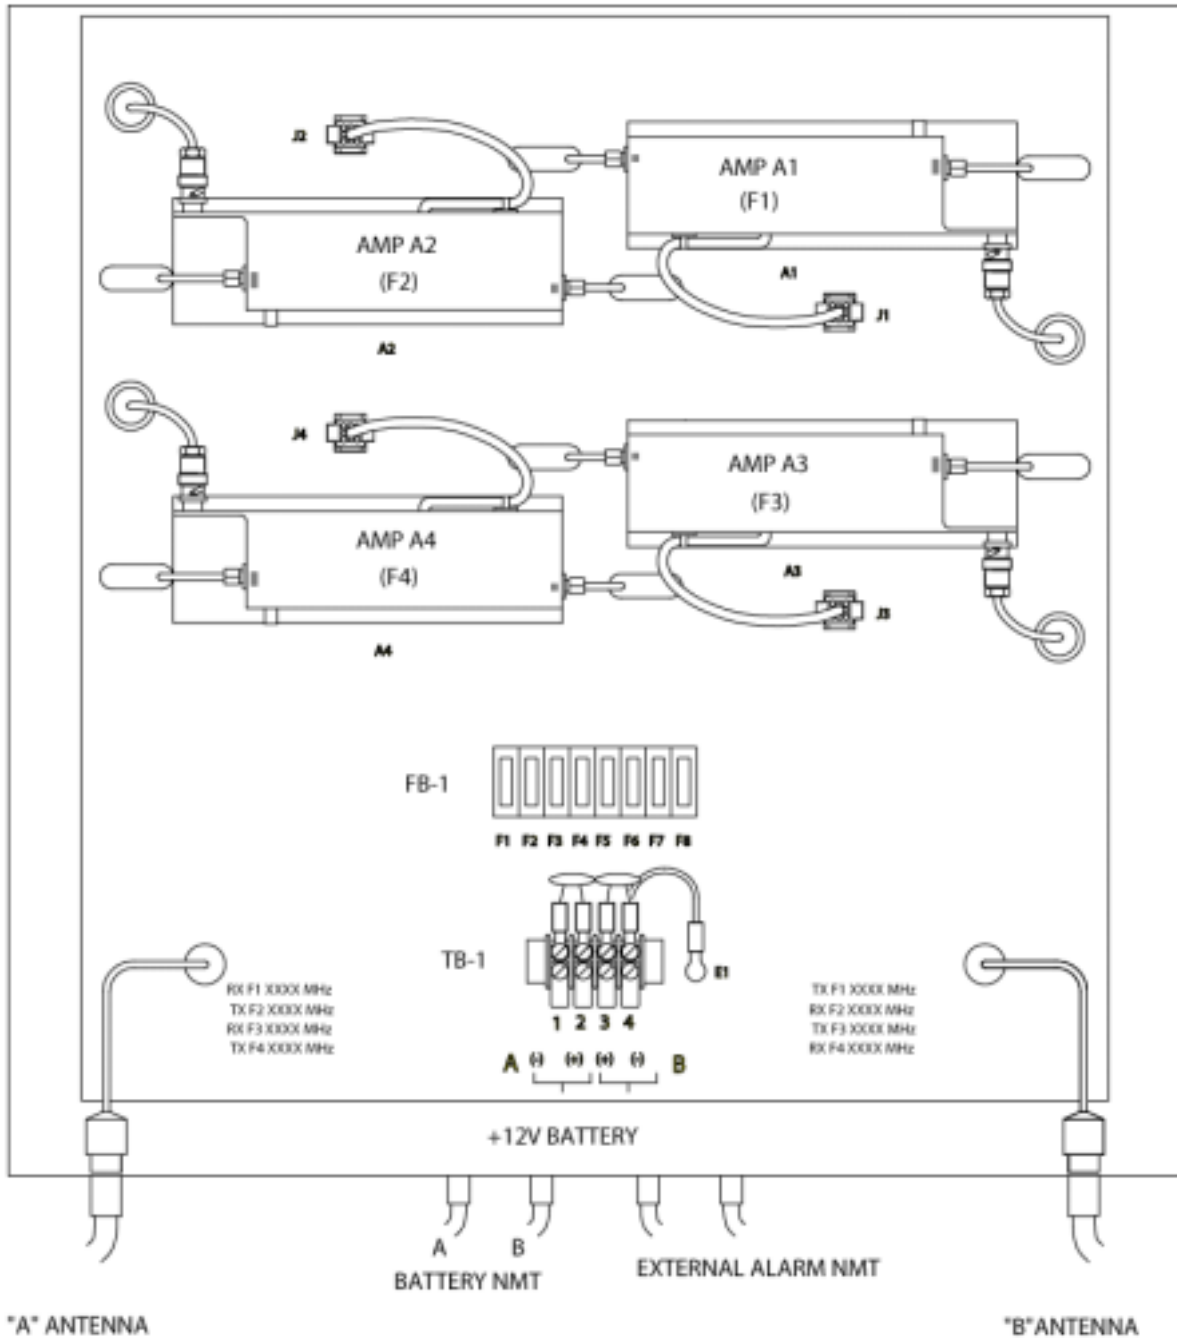

RF-2500E-02

FIGURE 2.1

RF REPEATER, DUPLEX

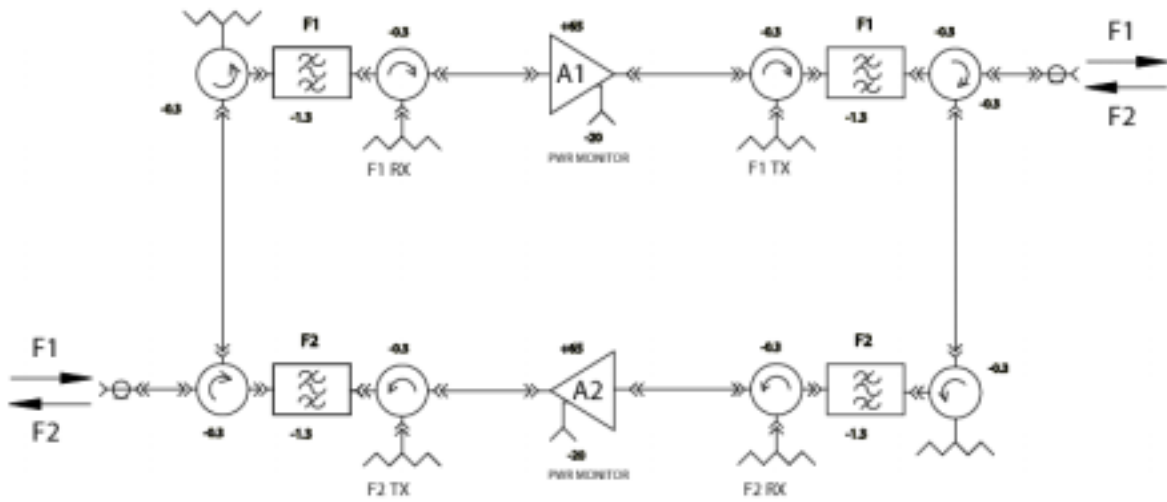

RF-2500E-01

FIGURE 2.2


RF REPEATER, ONE WAY



RF-2500E-03

FIGURE 2.3

DUPLEX, FREQUENCY DIVERSITY

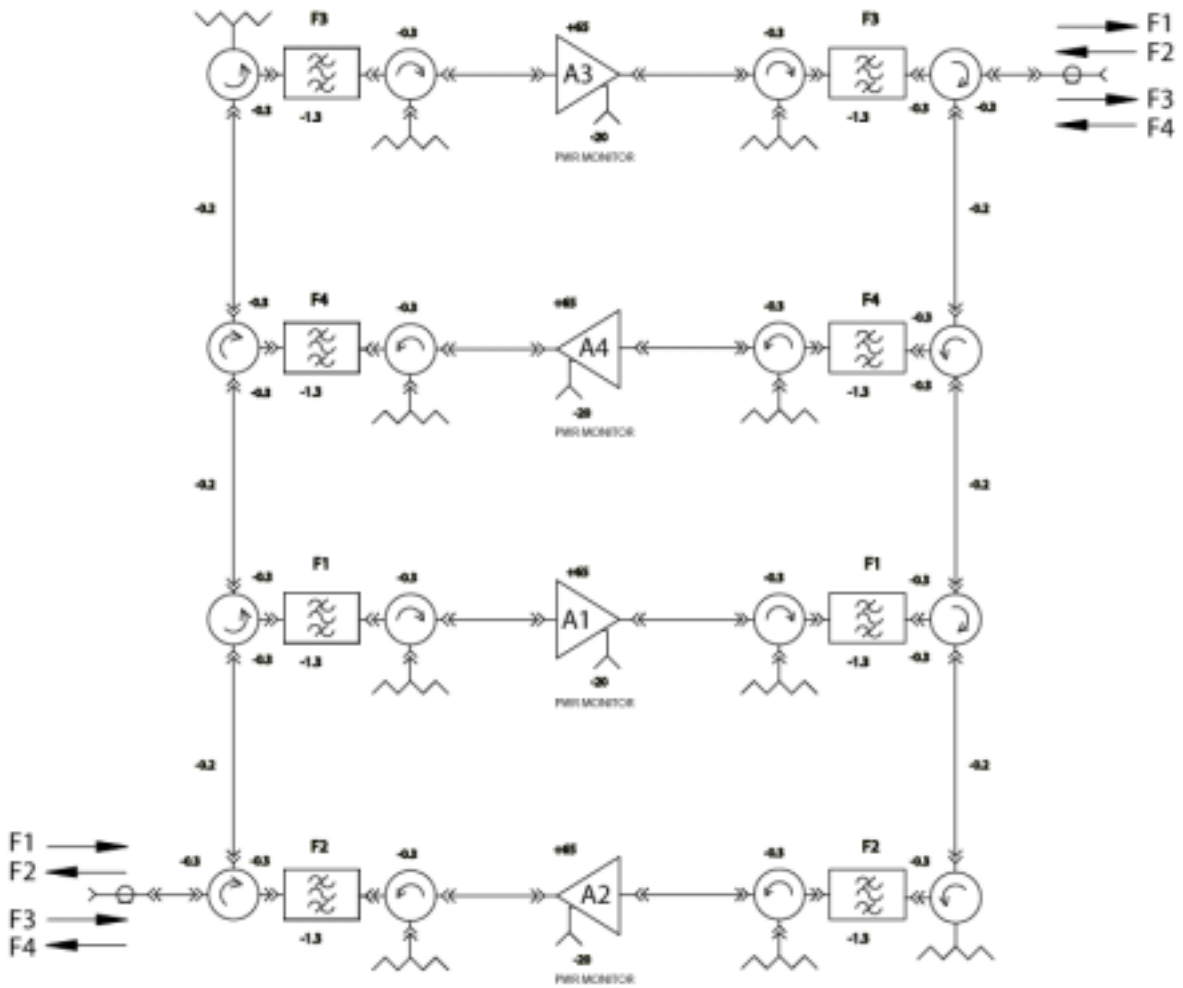

RF-2500E-02

## RF-2500E Repeater

terminal receiver in a short path. Pads are mounted on input and output of amplifiers. Table 2.1 shows the nominal input and output power level for single channel duplex configuration. Detail information is in Technical Summary at the beginning of this manual.

### Amplifiers

- In digital radio applications, in order to maintain linearity over the entire signalling envelope, the amplifiers operate at a reduced average power level to meet the output power level requirement as shown in Table 2.1. Each amplifier is mounted on the front of the panel to allow easy AGC/ALC adjustment and amplifier replacement in the field. Necessary information for ordering spare or replacement amplifiers is provided in Part 5, Ordering.

### Directional Couplers

- Directional couplers, built into the amplifiers, provide signal monitor points (Figure 2.4). These allow in-service measurement of transmit output power. The monitor points are calibrated to indicate actual RF output power at the antenna connector. When measuring transmit power, the power meter reading obtained, plus the loss (in dB) marked at the amplifier monitor point, minus the branching loss (in dB) marked on the panel, equals actual transmit output power. For example:

(1)	Power meter indication	=	+5.0dBm
(2)	Loss marked at monitor	=	18.2dB
(3)	Branching Loss	=	-2.2dB
			-----
	Output Power	=	+21.0dBm

### AGC/ALC and Max.Gain Adjustment

- There are two field-adjustable potentiometers on the amplifier (shown in Figure 2.4). The repeater output level and nominal gain is adjusted by AGC/ALC potentiometer. The other potentiometer is for maximum gain adjustment, which is left at minimum attenuation by the factory. If for any system requirement, the maximum (linear) gain of the repeater can be reduced by this potentiometer. However, any reduction of the maximum gain of the repeater will also reduce the AGC/ALC range of the repeater by the same amount.

### Power Supply

- The only active elements in the RF-2500E assembly are the amplifiers which operate from a +13.5 Vdc source. Current requirements are 1.1 Amperes per amplifier. The repeater assembly may be powered from solar panels/batteries, primary cells only, or from an ac/dc supply with standby battery (shown in Figures 2.5 and 2.6).

- Storage batteries and solar cell panels are selected on the basis of the average insolation and temperature range at the site. The batteries are engineered to provide the required reserve capacity across the temperature range and during periods when the output from the solar panels is low or not available. Controllers are used with the solar panels to efficiently charge the batteries without overcharging. Peninsula Engineering can determine the solar and battery capacity. The location of the site should be specified when requesting assistance.

- In areas where commercial power is available, an ac power supply can be provided. Although one ac power supply will provide ample current to power all amplifiers, dual AC power supplies are recommended for higher reliability. The dual AC power supply system also contains two charge controllers and two sets of standby battery to provide power during AC power failures. Each battery is float charged while the power supply is on and has 100 amp-hours as standard capacity. Additional batteries can be purchased if the system requirement needs.

- In locations where commercial power is not available and solar panel charging is impractical, primary cell batteries capable of powering an RF-2500E repeater in excess of a year are available. In such applications, the battery installation should be given an environmental shelter according to the manufactures recommendations.

## 3. ALARMS


- The RF-2500E repeater can be provided with an optional alarm system to remotely monitor the repeater site.

Conditions that are typically monitored are listed below:  
Standard Telemetry:



FIGURE 2.4

AMPLIFIER

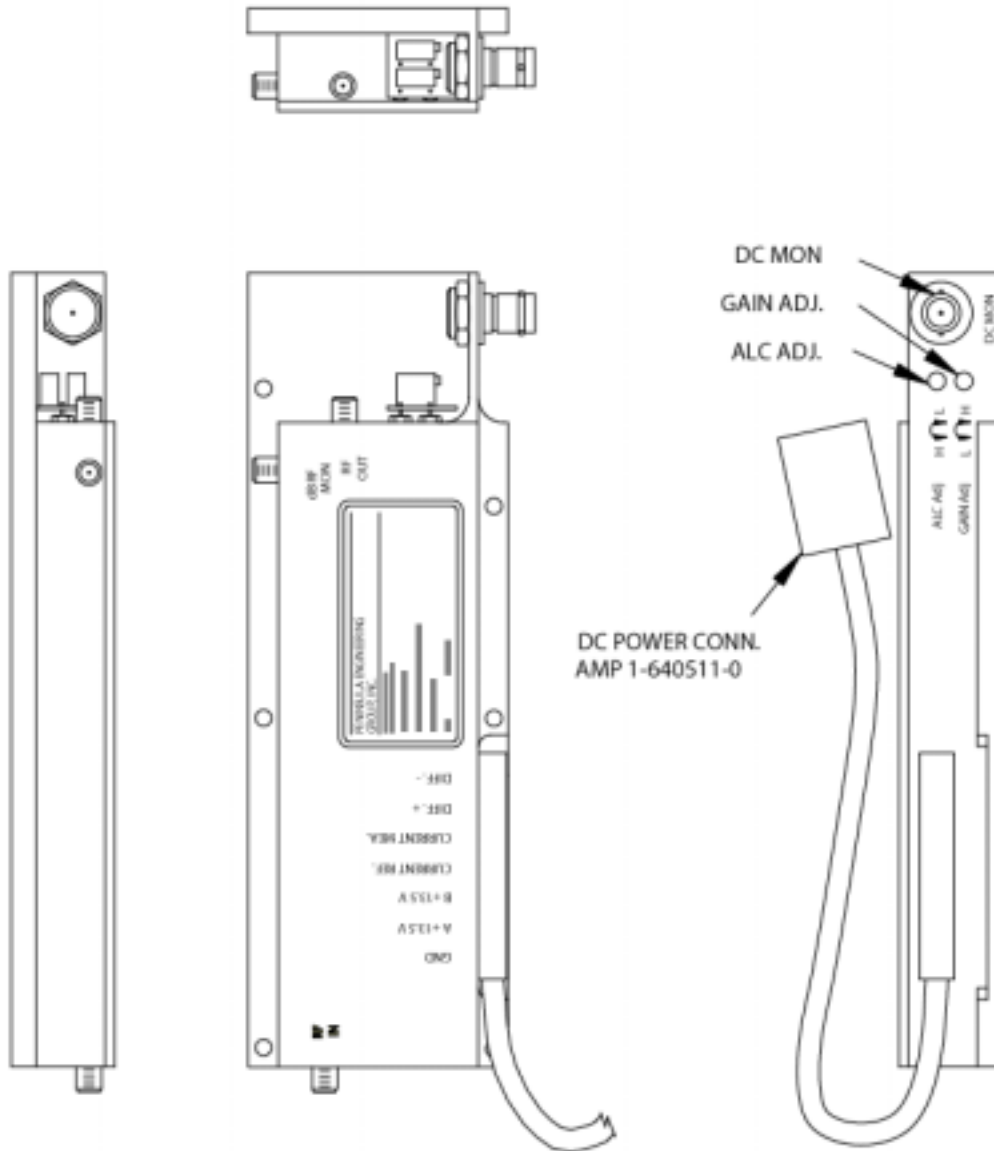

PIN ASSG.

# FUNCTION

- 1 GND
- 2 +13.5V, PRI
- 3 +13.5V, SEC
- 4 AMP CURRENT REF
- 5 AMP CURRENT MEAS
- 6 DIFF ALARM  
SIGNAL IN (+)
- 7 DIFF ALARM  
SIGNAL IN (-)

FIGURE 2.5 POWER BLOCK DIAGRAM


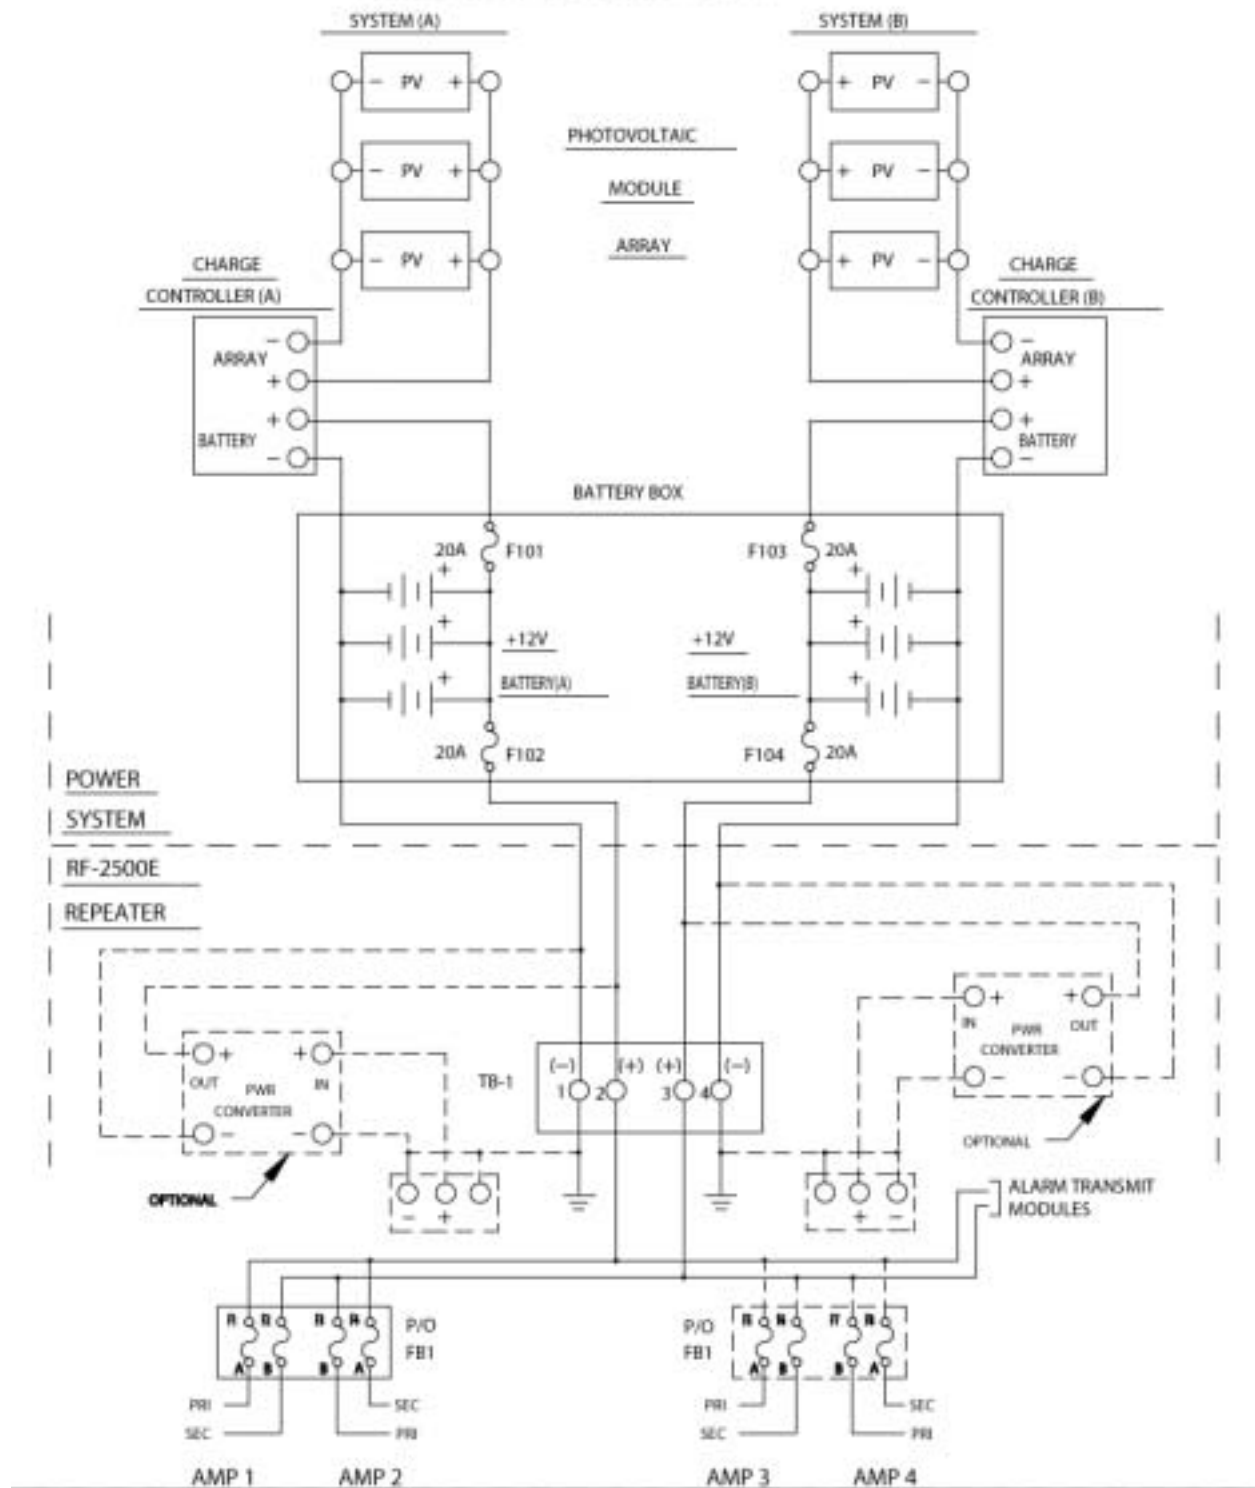


FIGURE 2.6

REPEATER POWER WIRING PICTORIAL

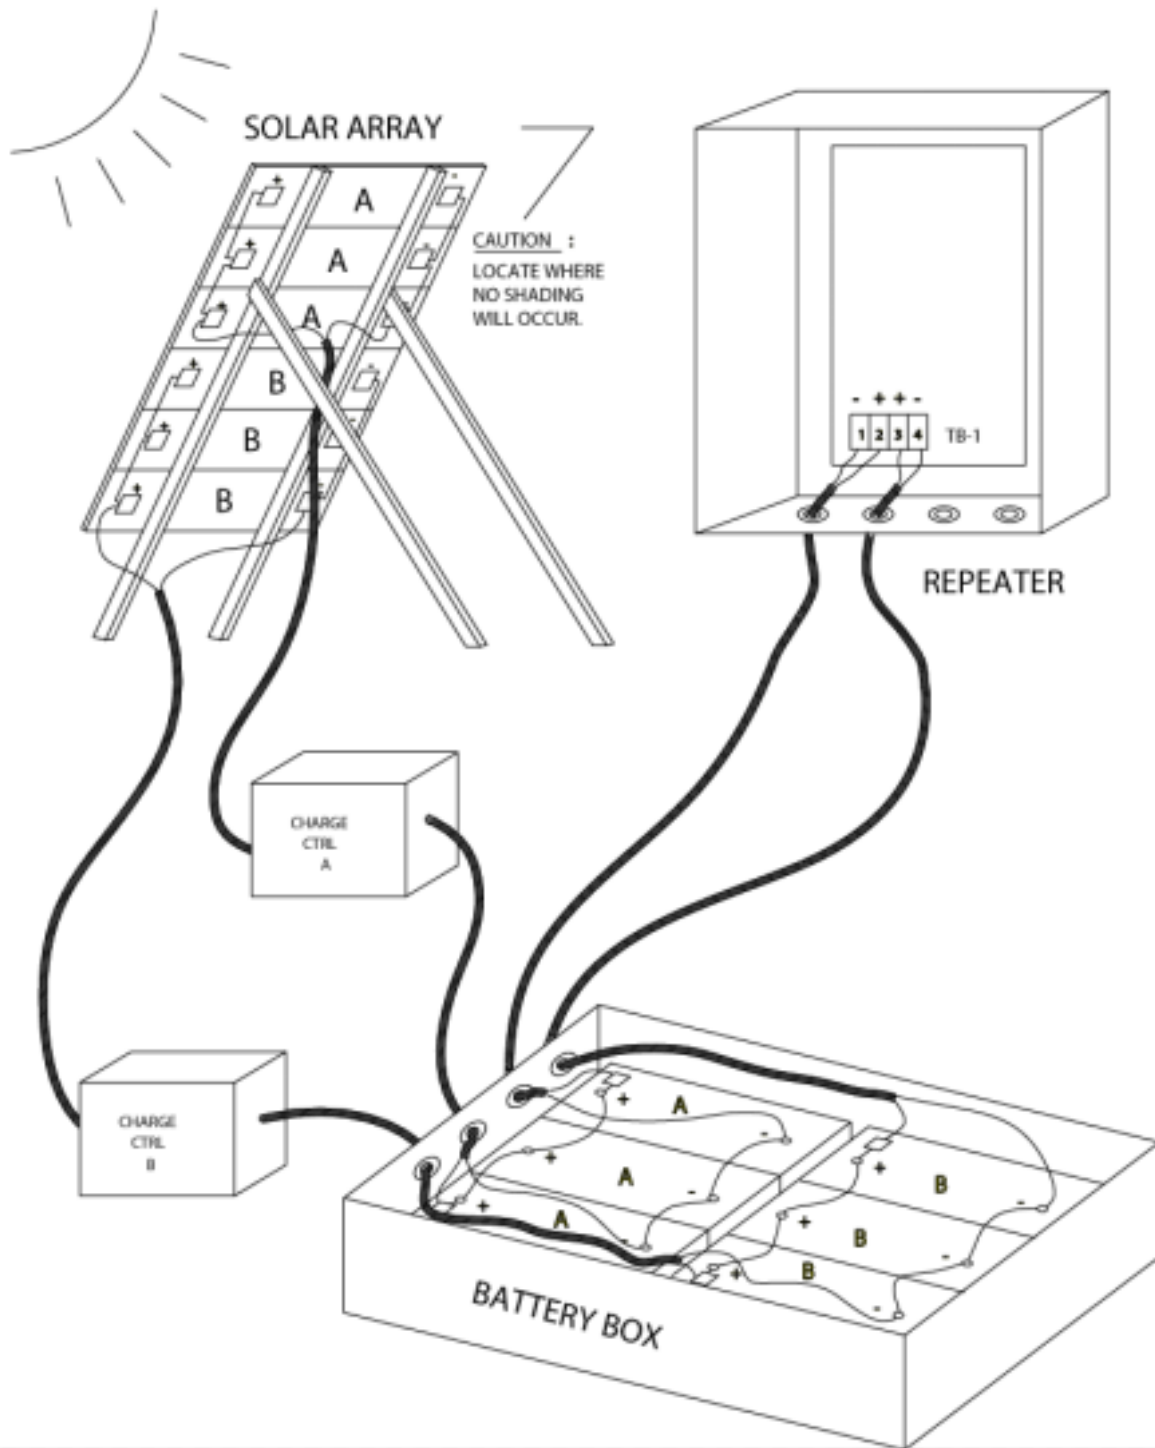

## RF-2500E Repeater

- a) A and B Battery Voltage
- b) Battery Temperature

Standard Trip Points:

- c) A and B Battery Major Alarm (2)
- d) East and West RF Output Low (2)
- e) Amplifier Alarm
- f) Cabinet Door Open
- g) Feedline pressure low

- The alarms are relayed back to the terminal through the use of a low rate telemetry signal directly modulated on the RF in a non-interfering fashion. Alarms are visually displayed on the terminal receiver unit. Alarm contact closure outputs are available for input to standard microwave supervisory systems.

### 4. LICENSING

\*RESERVED\*

### 5. ORDERING

- The RF-2500E RF Repeater Assembly is ordered by specifying the system model number RF-2500E-XX (Table 5.1). Attenuators are provided by specifying their part numbers. Transmission engineering must be completed before ordering because the necessary attenuator values are determined from

the path calculations. Part numbers are listed in Table 5.2.

- When doing the initial system layout of a radio hop which includes a RF-2500E RF Repeater Assembly, several factors must be considered prior to ordering, to ensure correct antenna connections.

- (a) Terminal transmit-Repeater receive frequencies (F1 and F2 or F1, F3 and F2, F4).

- (b) Physical mounting of RF-2500E repeater on tower (or crossarms) in relation to mounting of antennas.

The RF-2500E repeater may be factory-tuned so that f1 RCV (LEFT) associates with the lower of the two frequencies and f2 RCV (RIGHT) with the higher; or vice versa. By comparing the factors listed above, correct antenna/coaxial feeding connections will result. The equipment order must specify the f1 and f2 frequencies.

For example:

f1 RCV = 2304MHz or f1 RCV = 2354MHz

f2 RCV = 2354MHz      f2 RCV = 2304MHz

- Alarm system is optional. It should be ordered according to Table 5.4.

- Orders should include a shipping destination and a billing address. Upon receipt of your order, Peninsula Engineering returns an acknowledgement with the scheduled shipping date. An equipment list, showing the equipment ordered and shipped, is included with the shipment.

**Table 5.1**  
**Standard Assemblies**  
**RF 2500E RF Repeater Ordering Information**

Standard Assembly	Description	Frequencies (MHz)
RF-2500E-01	Duplex, Operates in 2.3 - 2.7 GHz Band Maximum loading 1200 FDM channels, 672 PCM channels or a color video channel	F1, F2
RF-2500E-02	Duplex, Frequency Diversity	F1, F2, F3, F4
RF-2500E-03	One-Way	F1

**Table 5.2**  
**Coaxial Attenuator**

Stock Number	Attenuation	Part Number	Attenuation
149-0128-01	1.0dB	149-0128-11	11.0dB
149-0128-02	2.0dB	149-0128-12	12.0dB
149-0128-03	3.0dB	149-0128-13	13.0dB
149-0128-04	4.0dB	149-0128-14	14.0dB
149-0128-05	5.0dB	149-0128-15	15.0dB
149-0128-06	6.0dB	149-0128-16	16.0dB
149-0128-07	7.0dB	149-0128-17	17.0dB
149-0128-08	8.0dB	149-0128-18	18.0dB
149-0128-09	9.0dB	149-0128-19	19.0dB
149-0128-10	10.0dB	149-0128-20	20.0dB

149-0128-XX                      Coaxial Attenuator. Equipped with SMA male and female connectors. May be inserted in receive line or transmit line for RF level coordination.

**Table 5.3**  
**Spare/Replacement Amplifier Ordering**

Description	Stock Number
Amplifier	090-0209-01
Sparing Kit	091-0005-01

**Table 5.4**  
**Alarms Ordering, RMAS-100-02 Alarm System**

Standard Assembly Stock Number	Transmit Module	Freq. Diversity Sensor Card	Receiver Module
900-0040-05	1	0	1
900-0040-06	1	0	2
900-0040-07	1	1	1
900-0040-08	1	1	2

One alarm transmit module can send information to terminals at one or both ends of the Repeater Link. Order receive modules for one or two locations as needed. Frequency diversity or two channel duplex (1+1) systems require an additional frequency diversity sensor card for the transmit module.

### 6. INSTALLATION

#### General

- When the RF-2500E equipment is received, inspect it carefully for damage. Claims for damage should be reported directly to the transportation company involved immediately, in accordance with their instructions.
- The RF-2500E assembly can be mounted on crossarms on a wood-pole structure, a steel tower, or on a wall. At extremely hot environment, eg. desert, shading from direct sunshine may be required. The length of all power leads should be limited and the wire size adequate to minimize the voltage drop. The repeater assembly, battery boxes, solar panels, and antennas should all be mounted before any wiring is done. Mounting hole dimensions for the repeater housing are shown in Figure 6.1.
- Prior to cutting to length and connecting the coaxial feedlines, verify which repeater receive frequency associates with each antenna port. The repeater receive frequencies are marked on the repeater panel by each "N" type connector.
- The coaxial feedlines are terminated in type N(female) connectors with extended threads. The threaded end mounts in a hole in the cabinet bottom with a 5/8-24 UNEF (Type N), PEGI p/n 125-0063-09 nut. The connector type is Andrew p/n L45N or equivalent. A jumper of semi-rigid coax (Figure 6.2) is provided to connect from the feedline connector to the panel connector (Left: 187-0278-01 and Right: 187-0278-02).

TO ENSURE TIGHT CONNECTION, DO NOT USE ANY WASHERS OR SPACERS BETWEEN CABINET AND NUT.

#### Power Wiring

- Remove the fuses from the holders in the battery boxes, if storage batteries are used. The power leads can be brought into the repeater housing through the 1/2 inch (13- mm)-non-metallic conduit (NMT) fittings provided. Use paired 10-gauge (2.50-mm) wire from the batteries to the repeater terminal block and from the solar panels to the charge controller terminal block. Connect the NEGATIVE leads to terminals 1 and 4 of terminal block TB-1 as shown in Figures

1.1, 1.2 and 2.5. If a single ac supply is used, jumpers must be installed between terminals 2 and 3 on the lower side of the terminal block as shown in Figures 1.1 and 1.2. Note that the equipment uses a negative ground.

DO NOT CONNECT ANY POSITIVE POWER LEAD TO TB-1 AT THIS TIME.

Application of power is covered in paragraph 7.03.

#### DC Power

- The repeater is normally powered from a dual battery system designated "A" and "B." The "A" battery is wired to power the "A" side of the equipment. Similarly, the "B" battery is wired to power the "B" side of the equipment. Standby power switchover is accomplished within each amplifier. Each amplifier has a primary and secondary battery input. If the primary battery should fail, operation will immediately continue on the secondary battery.

### 7. TESTS

#### General


- Few adjustments are required on the RF 2500E repeater. After application of power, AGC/ALC adjustment, and proper antenna orientation, the equipment is ready to be placed in service. Use of portable or mobile radio to establish a talk path between the RF-2500E repeater site and the terminals, will aid in completing the tests and in verification of normal (calculated) system operation.

#### Test Equipment

- The description of test equipment in Table 7.1 includes the manufacturer's type/model numbers that are available as of the publication date. Since certain models of test equipment may become discontinued or superseded by the manufacturer at any time, it is recommended that a manufacturer's current catalog be used when ordering the equipment. The test equipment manufacturers listed are for reference only and are not intended to show a preference for any one manufacturer. Equivalent test equipment may be used unless otherwise noted. Regardless of the test equipment used, it must be

FIGURE 6.1

CABINET MOUNTING DIMENSIONS

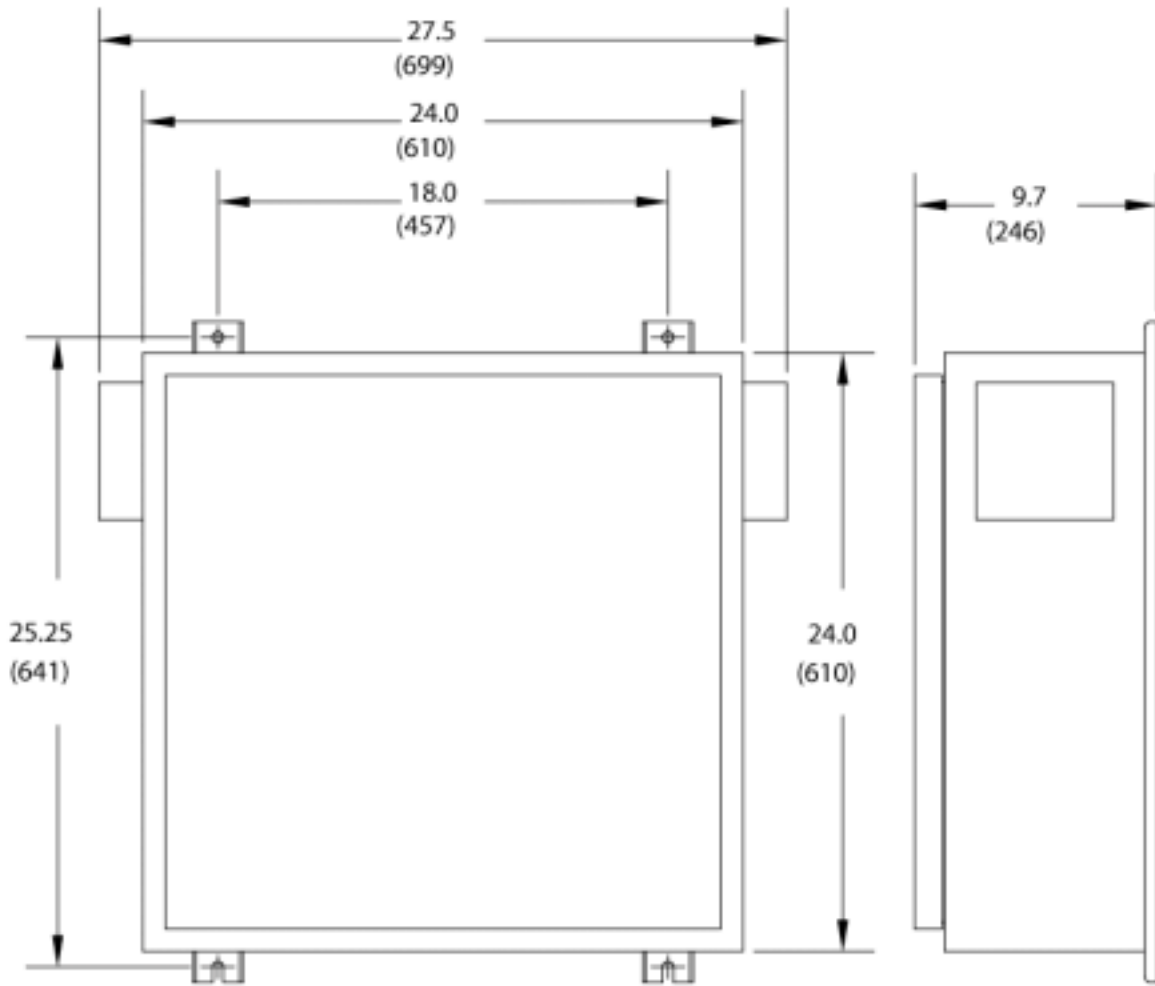


MOUNTING HOLES ARE .44 DIA.  
(112)

DIMENSIONS ARE IN INCHES  
(mm)

FIGURE 6.2

ANTENNA COAXIAL CONNECTIONS

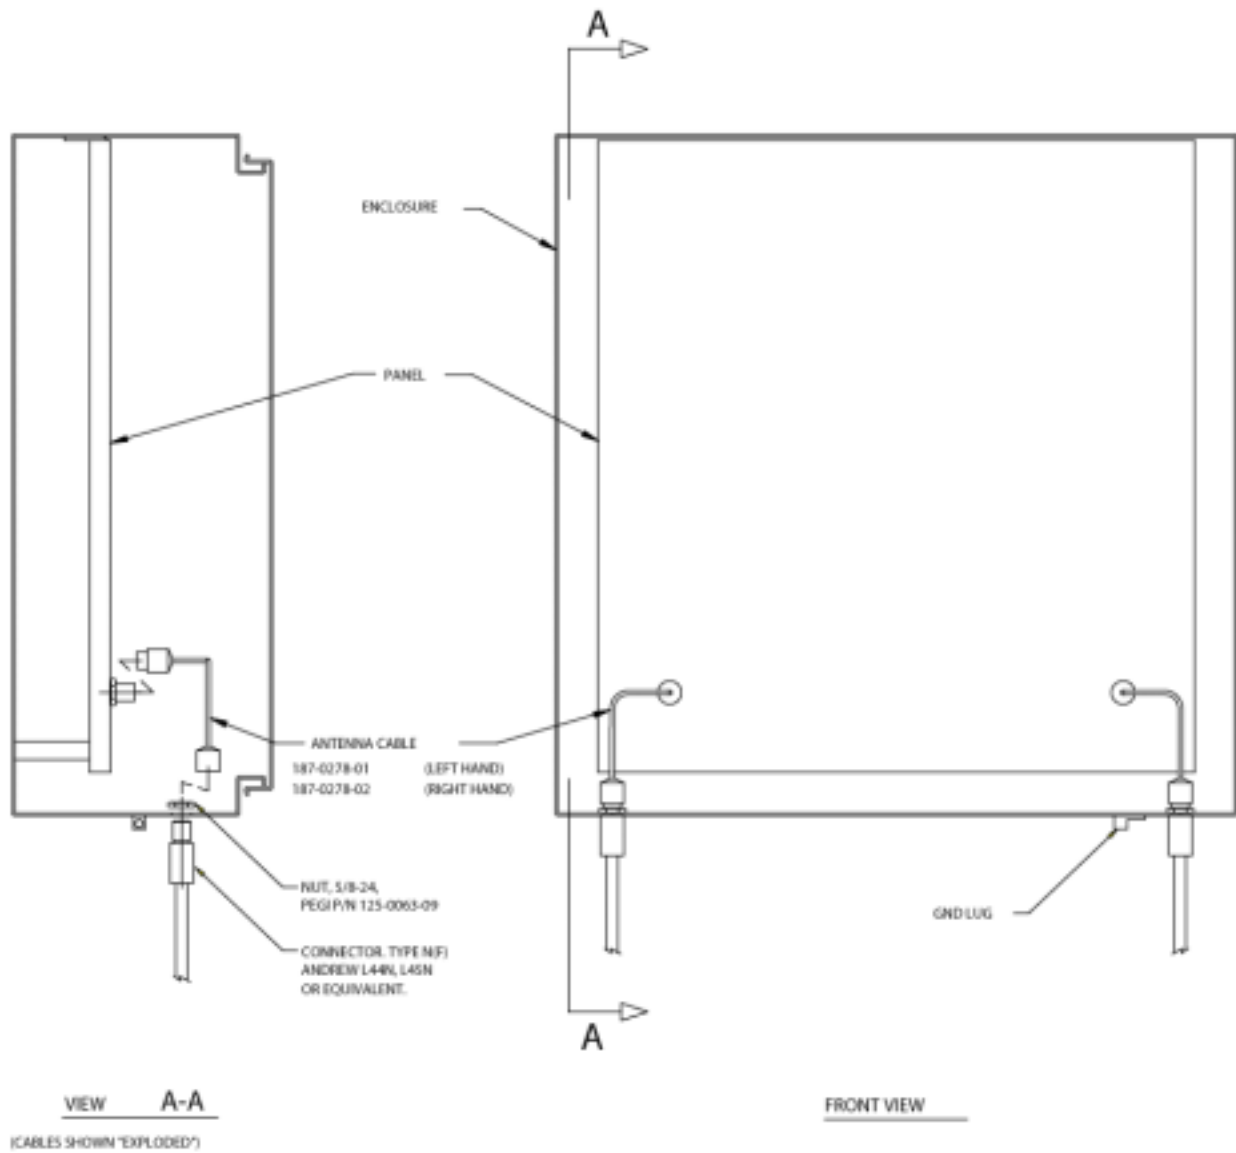



properly maintained, calibrated, and operated according to instructions given by the manufacturer.

### Application of Power

- If solar panels and storage batteries are used, measure the voltage across Charge Controller input terminals (+) and (-). Confirm the proper polarity. The voltage reading should be between 12 and 17 Vdc. If the polarity is incorrect or there is no voltage, check and correct the wiring to the solar cell panels. If the voltage is low, check to be sure the surfaces of the solar panels are not obscured from sunlight. Next, remove battery input fuses F101 and F103. Battery output fuses should now be in place. Measure the voltage across terminals 1 (-) and 2 (+) and across terminals 3(+) and 4 (-) of repeater terminal block TB-1. Confirm the proper polarity. The voltage reading should be +12.5 to +13.5 Vdc for storage batteries or +13.0 to +15.0 Vdc for an ac power supply. If the polarity is incorrect or there is no voltage, check and correct the wiring of the batteries or ac power supply. Replace battery fuses F101 and F103.

- Set the digital voltmeter (dvm) to read in a range of 5A or greater and put its test leads in series between positive lead from battery system A and terminal 2 (+) of TB-1 on the repeater (Figure 2.5). After the current stabilized in half a minutes, the current should be 1900 to 2200 mA for duplex or 950 to 1100 mA for one-way; and 3800 to 4400 mA for duplex frequency diversity. Log all voltage and current readings in Table 8.1 for reference during routine maintenance or trouble location procedures.

- Repeat the above procedure to measure current from battery system B and terminal 3 (+) of TB-1 on the repeater. The current should be the same as recorded in Section 7.04. Log them in Table 8.1.

- Connect the positive lead from battery system B to terminal 3 (+) of TB-1. Make measurement as stated in Section 7.04. The current reading should be 950 to 1100 mA for duplex or one-way; and 1900 to 2200 mA for duplex frequency diversity. Log in Table 8.1. Connect the positive lead from battery system A to terminal 2 (+) of TB-1.

**Table 7.1**  
**Recommended Test Equipment**

Item	Manufacturer and Type Number	Use	Quantity
DVM	Fluke 75 or equivalent	Measure 12 to 15 Vdc and current from 150mA to 2500mA	1
RF Power Meter	Hewlett-Packard 435B equipped with 8481A or equivalent	Antenna orientation and output power measurements (-10 to +25 dBm)	1
Spectrum Analyzer	Hewlett-Packard 8563A or equivalent	Antenna orientation	1
Attenuator	Microlab/FXR AJ-500F, 30 dB or equivalent	Antenna orientation and power alarm set (RMAS-100)	1

### Antenna Isolation Measurement

- In order to prevent oscillation or severe passband distortion, the antenna must have a minimum port-to-port isolation. Please refer to Appendix A for detail information.
- Measure the isolation by sending a signal into one of the antenna feeders and measuring the level of that signal at the other antenna feeder. The signal power level difference in dB is the isolation of two antenna.
- Be aware that the motion of objects near to the antenna can change the isolation. Tests should be made with any expected objects present, if possible, to ensure that the isolation does not drop below minimum.
- Repeat the test at several frequencies across the designated bandwidth, making sure the minimum isolation is met at ALL frequencies.
- If isolation is not met, try repositioning the antenna, or adding intervening shielding and then measure again.

### Antenna Orientation, AGC/ALC set and Output Measurement

- Before antenna orientation begins, the amplifiers must be operating in their full gain mode (out of AGC/ALC range). The setting of the AGC/ALC along with a high input level (greater than [desired output power level in dBm - 60 dB]) may cause the normal action of the AGC/ALC circuit to mask changes in power due to azimuth and elevation sweeping of the antennas. The output power of an amplifier will increase in level as the input level is increased to the point where the AGC/ALC has been set (eg. +18 dBm). Further increases in input level will be absorbed in the AGC/ALC circuit. To use the amplifier power monitor point as a signal strength indicator, turn Variable Gain pot counter-clockwise to reduce the linear gain of the repeater such that the output is below the desired level. Its AGC/ALC function is disabled now. If during antenna orientation, the power rises to the desired power level, turn the Gain Adjustment counter-clockwise further more to reduce the output level again and then continue with antenna orientation. Same result can be achieved by reducing the input level with adding attenuators at the input of the amplifier.

- Connect the power meter or spectrum analyzer to the f1 amplifier, A1, RF PWR MON port. With a signal transmitted from the A terminal, position the A antenna for a maximum power reading on the meter or analyzer. Turn Gain Adjustment fully clockwise and remove any temporarily installed input attenuators. Re-set the power level with the AGC/ALC adjustment if needed. The AGC/ALC adjustment is located near the output end of each amplifier, see Fig.2.3. Use screw driver to adjust the AGC/ALC potentiometer CW to reduce the power setting or CCW to increase the AGC/ALC set point. Log the power reading to fulfill FCC requirements. Remove the meter from the f1 Amplifier PWR MON to the f2 Amplifier PWR MON. With a signal transmitted from the B terminal, position the B antenna for a maximum power reading on the meter or analyzer. Turn Gain Adjustment fully clockwise and remove any temporarily installed input attenuators. Set the power level with the AGC/ALC adjustment if needed. Log the power reading to fulfill FCC requirements. Measure and log the power at any additional amplifier directional couplers so equipped (f3, f4...). Remove the meter.

- After the antenna orientation has been completed at both terminals and the repeater, AGC readings should be taken at the end terminals and logged for reference. A maintenance test record is shown in Table 8.1

### RX/TX Pad Installation

- If required in the field, the RX/TX pads should be installed at the RF input or output of amplifiers. To install it, turn off the DC power supply first. Disconnect the input/output semi-rigid cable from the amplifier. Connect the SMA male end of the pad to the amplifier SMA female input/output; and then connect input/output cable to the other end of the pad. Check all coaxial connections for tightness(8 in-lbs). Set output power level by adjusting AGC/ALC.

## 8. MAINTENANCE

### Routine Maintenance

- Unless unique conditions require more frequent maintenance, routine maintenance should be performed annually. Clean the surfaces of the solar cell panels with isopropyl alcohol or a mild detergent solution. Do not use alcohol compounds

## RF-2500E Repeater

containing acetone. Check and clean the wiring connections to the solar charge controllers and the battery connectors as necessary. Follow the procedures as stated in Sections 7.03 through 7.06, measure the current of the repeater system. The current reading should be within the same limits. Also measure the power level at PWR MON of each amplifier with a power meter. Log current and power reading in Table 8.1.

### Administration Requirements

- The Local Telecommunications Administrations may require measurement of the output power of the repeater at installation or when any changes are made which cause the output power to change. Using the power meter, measure and log the output power in Table 8.1 as indicated in paragraph 8.01.

### Trouble Location

- Soft failure of one amplifier will be indicated by a drop of approximately 6 dB in the received signal level at the terminal in the direction of transmission, which will be indicated on the agc meter on the terminal equipment. Amplifier AGC/ALC may correct for this drop. The failure of one amplifier will most likely be caused by a failure of DC power to the amplifier. Using the dvm, check for presence of dc voltage at the amplifier power feed through connections.

- If the received signal at the terminals is low but does not indicate a complete failure on one amplifier, the most likely cause is low voltage from the batteries. Low voltage is an indication of a possible battery failure, or a failure of the charging system. In the case of the primary cell batteries, the batteries are probably reaching the limit of their life. Check the batteries and all power lead connections. If solar panels are used, be sure they are not obstructed from sunlight and that the surfaces are clean. If an ac power supply is used, low voltage is probably the result of a power failure, the duration of which exceeded the reserve power limits of the standby battery. Check the standby battery in accordance with the instructions given by the manufacturer of the power supply.

### Amplifier Replacement, Out of Service

- When an amplifier must be replaced in an Out of Service condition, do the following:

- a) Unplug amplifier's power connector.
- b) Disconnect input and output SMA cables.
- c) Disconnect BNC cable from DC monitor point.
- d) Remove mounting hardware (6 screws).
- e) Remove amplifier.

- To install the replacement amplifier:
  - a) Mount the amplifier on the panel securing with mounting hardware.
  - b) Connect the BNC cable to DC monitor point.
  - c) Connect input and output SMA cables.
  - d) Check all coax connections for tightness (8in/lbs)
  - e) Plug-in the amplifier's power connector.
  - f) Verify operation by measuring power at SMA power monitor.
  - g) Set output power by adjusting AGC/ALC.

### Amplifier Replacement, In Service

(For RF-2500E-01 Duplex and RF-2500E-03 One-Way Only)

- When an amplifier must be replaced while the repeater is in service (eg. soft failure), do the following:
  - a) Mount a temporary spare amplifier in and oriented in the same input/output direction as the amplifier to be replaced.
  - b) Remove the SMA terminations from the coaxial circulators in series, identified by F1 or F2, with the amplifier to be replaced (shown in Figures 1.1 and 1.2).
  - c) Connect the flexible coaxial cables or semi-rigid coaxial cables (part of the sparing kit) from the input(RX) coax circulator open port to the temporary spare amplifier's input SMA. Likewise connect the output(TX) coax circulator open port to the temporary spare amplifier's output SMA connector.
  - d) Connect the DC leads from the temporary spare amplifier using the power adapter in the sparing kit to the "A" battery if replacing amplifier A1, or "B" if replacing amplifier A2.
  - e) Disconnect the input coaxial cable from the amplifier to be replaced. The signal is now carried in the temporary spare amplifier, but may be 20 dB down.
  - f) Unplug the power connector of the amplifier to be replaced.
  - g) Disconnect the output coaxial cable from the amplifier

to be replaced.

- h) Re-set the output power of the temporary spare amplifier by adjusting its AGC/ALC.
  - i) Remove BNC cable from DC monitor point of the replaced amplifier to the temporary spare amplifier.
  - j) Unscrew mounting hardware (6ea) and remove the defective amplifier.
- To install a replacement amplifier in service:
    - a) Mount the amplifier on the panel securing with mounting screws.
    - b) Connect BNC cable to DC monitor point.
    - c) Connect the output coaxial cable to the replacement amplifier's output. Signal level will drop 20 dB.
    - d) Plug in the amplifier's power connector.
    - e) Connect the input coaxial cable to the replacement amplifier's input. Signal level should be close to

normal. Set power by adjusting AGC/ALC.

- f) Remove the power connections from the temporary spare amplifier.
- g) Disconnect the flexible or semi-rigid coax cables from the coax circulators and from the temporary spare amplifier.
- h) Replace the SMA terminations on the coax circulators. Check the output power of the amplifier. Re-set its power by adjusting AGC/ALC if needed.
- i) Remove the temporary spare amplifier.

### CAUTION

Due to unpredictable reflections within the RF-2500E, operation with a temporary spare amplifier, it may be degraded somewhat from normal, particularly in high capacity digital and analog systems. Be sure the AGC/ALC is set for the correct power level in your system.

**TABLE 8.1  
PENINSULA ENGINEERING  
RF-11000 MAINTENANCE RECORD**

Date				
Solar Panel, System A Voltage :				
Solar Panel, System B Voltage :				
Battery, System A Voltage : Temperature :				
Battery, System B Voltage : Temperature :				
Current Drawn From Battery A Only				
Current Drawn From Battery B Only				
Current Drawn From Battery A While Battery B is Connected				
Amplifier, A1 F1 Power Monitor :				
Amplifier, A2 F2 Power Monitor :				
Amplifier, A3 F3 Power Monitor :				
Amplifier, A4 F4 Power Monitor :				

## APPENDIX A

### Antenna System

The antenna system is vital to the success of any RF repeater. It was only when high performance microwave antennas became available that high capacity RF repeater become practical. The antennas must have high gain (25-50 dB), clean pattern, low sidelobes and good Front-to-Back ratio. It is the sidelobes and Front-to-Back ratio that control much of the echo that results from antenna to antenna coupling. Foreground obstructions also produce an echo component which is site specific.

The objective for permissible echo varies with the type of transmission and its bandwidth. High capacity analog radios require 50-55 dB C/I while low capacity analog and digital radios require 24-30 dB C/I. The actual amount of echo permitted must be calculated based on the radio manufacturer's specifications and end system design requirements. Table A-1 shows the required RF repeater C/I with different types of radios.

For example, a 16 QAM digital system requires 33 dB

C/I at the repeater. The 2.5 GHz RF repeater gain is 50 dB. antenna-to-antenna decoupling required is  $33+50=83$  dB. This can be obtained from two 41 dB gain standard antennas with 48 dB Front-to-Back ratio (F/B). Cross polarization of the antenna is recommended. An antenna Cross Polarization (XPD) of 20 dB is easily obtained. Antenna separation loss of 49 dB is assumed by taking 75% of free space loss between the feeds of the two antennas. The decoupling is now:

+48	dB	F/B of Antenna #1 (standard)
-41	dB	Gain of Antenna #1 (8 foot)
+48	dB	F/B of Antenna #2 (standard)
-41	dB	Gain of Antenna #2 (8 foot)
+20	dB	Antenna XPD
+49	dB	Antenna separation loss (25 feet)
<hr/>		
83	dB	Total decoupling loss
-50	dB	Repeater Gain
<hr/>		
33	dB	C/I

In this situation, two standard antennas are adequate. If the repeater antennas could not be cross polarized, one or even two of the high performance antennas should be used.

**Table A-1**  
**C/I Requirements For Digital Radios**

For -1 dB system gain at  $10^{-6}$ BER or  $BER < 10^{-12}$  at normal RSL, use following table:

MODULATION TYPE	MINIMUM C/I
4 PSK	24
8 PSK	28
16 QAM	33
64 QAM	40
MSK/FSK	30
9 QPRS/QPR 3	31
25 QPRS/QPR 5	32
49 QPRS/QPR 7	33
81 QPRS/QPR 9	35

**Table A-2**  
**C/I REQUIREMENTS FOR ANALOG RADIOS**

The following table assumes full power available, with emphasis, 175 nsec of delay:

CAPACITY (CHAN)	DEVIATION	C/I for 10 dBmco IM	C/I fo 20 dBmco IM	C/I for 30 dBmco IM
24-48	50	28	18*	8*
72	50	30	20	10*
96	47/50	32	22	12*
120	200	44	34	24
132	30	40	30	20
252	65	42	32	22
300	200	45	35	25
420/480	200	53	43	33
600	200/141	54	44	34

NOTE\*: Operation with C/I less than these required values can cause other problems such as increasing the potential for oscillation and is therefore not recommended.